

Snabbguide för inställningar av MFW GO, signalöverföring

MF-L1M10-G8DEX-DIA-1-BF-1 (digital input)	EM-G8DEX-0-BB-0 (digital input)	EM-G8DAR-0-BX-0 (digital output)
--	------------------------------------	-------------------------------------

Adr=0
A1-8=OFF

Adr=1
A1=ON
A2-8=OFF

Adr=130
A1=OFF
A2=ON
A3-7=OFF
A8=ON

B1 = OFF
B2 = OFF

MF-L1M10-G8DAR-DIA-1-BX-1 (digital output)	EM-G8DAR-0-BX-0 (digital output)	EM-G8DEX-0-BB-0 (digital input)
---	-------------------------------------	------------------------------------

Adr=128
A1-7 = OFF
A8 = ON

Adr=129
A1= ON
A2-7= OFF
A8= ON

Adr=2
A1=OFF
A2=ON
A3-8=OFF

B1 = OFF
B2 = OFF

Följande enheter avser denna beskrivning

Typ	Modell
97BLAGAN1BB1	MF-L1S00-G8DEX-DIA-1-BB-1
97BLAGCN1BX1	MF-L1S00-G8DAR-DIA-1-BX-1
97BLBGAN1BB1	MF-L1M10-G8DEX-DIA-1-BB-1
97BLBGCN1BX1	MF-L1M10-G8DAR-DIA-1-BX-1
97BLCGAN1BB1	MF-L1M20-G8DEX-DIA-1-BB-1
97BLCGCN1BX1	MF-L1M20-G8DAR-DIA-1-BX-1

För mer utförlig beskrivning hänvisas till produktens manual.