

Plug-in sockets and accessories availability index

The relays not specified in the table are designed for other manners of mounting.

Type of relay	Plug-in sockets			
	Screw terminals		Spring terminals	For PCB
	on panel mounting	35 mm rail mount acc. to EN 60715		
Miniature relays				
RM699BV, RSR30 ❶	–	PI6W-1P	–	–
RM84, RM85, RM85 inrush, RM85 105 °C sensitive, RM87L, RM87L sensitive, RM87P, RM87P sensitive	(GZT80, GZM80 ❷), (GZS80, GZF80 ❸)	(GZT80, GZM80 ❷), (GZS80, GZF80 ❸)	GZMB80 ❹	(EC 50, PW80, GD50 ❺)
RM87N, RM87N sensitive	(GZT92, GZM92 ❷), GZS92 ❸	(GZT92, GZM92 ❷), GZS92 ❸	–	(EC 35, GD35 ❺)
RM96 1 CO	ES 32	ES 32	–	–
RM83	–	–	–	(EC 50, PW80, GD50 ❺)
RMP84, RMP85	GZF80 ❸	GZF80 ❸	GZMB80 ❹	(EC 50, GD50 ❺)
Miniature industrial relays				
R2N	(GZT2, GZM2 ❷)	(GZT2, GZM2 ❷)	GZMB2 ❹	SU4/2D ❽
R3N	GZT3, GZM3	GZT3, GZM3	–	–
R4N	(GZT4, GZM4 ❷) GZ4 ❷, GS4 ❸	(GZT4, GZM4 ❷) GZ4 ❷, GS4 ❸	GZMB4 ❹	SU4D ❽
RY2	GZY2G	GZY2G	–	–
R2M	GZ2 ❶	GZ2 ❶	–	S2M ❷
Industrial relays of small dimensions				
R15 - 2 CO	PZ8 ❸, GZ8 ❹, GZP8 ❺	PZ8 ❸, GZU8 ❹, GZP8 ❺	–	–
R15 - 3 CO	PZ11 ❸, GZ11 ❹, GZP11 ❺	PZ11 ❸, GZU11 ❹, GZP11 ❺	–	–
R15 - 4 CO	GZ14, GZ14Z	GZ14U	–	–
RUC faston 4,8x0,5, RUC-M	–	GUC11S-V0	–	–
Time relays				
T-R4	GZT4, GZM4 ❷	GZT4, GZM4 ❷	GZMB4 ❷	–

❶ Solid state relays type **RSR30** - see www.relpol.com.pl ❷ For sockets GZT80, GZT92, GZM80, GZM92 apply retainer / retractor clips GZT80-0040 or spring wire clips GZM80-0041 and description plates GZT80-0035 ❸ For sockets GZS80, GZS92 apply retainer / retractor clips GZS-0040 or spring wire clips GZM80-0041 and description plates TR. For sockets GZF80 apply spring wire clips GZM80-0041, GZ80-1001. For sockets GZF80 not applicable modules type M... and interconnection strips ZGGZ80 ❹ For sockets GZMB80 apply retainer / retractor clips GZMB80-0040, GZMB80-0025 or spring wire clips GZM80-0041, GZM80-0025 and description plates TR. For sockets GZMB80 not applicable interconnection strips ZGGZ80 ❺ For sockets EC 35, EC 50, GD35, GD50 apply: plastic clips MP16-2, MP25-2; spring wire clips MH16-2, MH25-2. For sockets GD35, GD50 apply also spring wire clips GD-0016. For sockets PW80 apply spring wire clips MH16-2, MH25-2 ❻ For sockets GZT2, GZT4, GZM2, GZM4 apply retainer / retractor clips GZT4-0040 or spring wire clips G4 1052 and description plates GZT4-0035 ❼ For sockets GZ4 apply spring wire clips G4 1052 ❽ For sockets GS4 apply spring wire clips GS4-0036 and description plates GS4-0035 ❾ For sockets GZMB2, GZMB4 apply retainer / retractor clips GZMB4-0040 or spring wire clips G4 1052 and description plates TR. For sockets GZMB2, GZMB4 not applicable interconnection strips ZGGZ4 ❿ For sockets SU4/2D, SU4D, SU4/2L, SU4L, G4/2, G4 apply spring wire clips G4 1053. For sockets SU4/2L, SU4L apply also spring clamps G4 1040

Plug-in sockets and accessories availability index

Relays mounting options are specified in the table - see www.repol.com.pl

Sockets		Accessories		
Solder terminals	Retainer / retractor clips	Spring wire clips	Description plates	Additional features
–	–	–	PI6W-1246	ZG20
–	GZT80-0040 ②, GZS-0040 ③, GZMB80-0040 ④	GZM80-0041 ② ③ ④, (MP16-2, MH16-2, GD-0016 ⑤)	GZT80-0035 ②, TR ③ ④	M... ③, ZGGZ80 ③ ④
–	GZT80-0040 ②, GZS-0040 ③	GZM80-0041 ② ③, (MP16-2, MH16-2, GD-0016 ⑤)	GZT80-0035 ②, TR ③	M..., ZGGZ80
–	MS 16, GZMB80-0040	GZM80-0041	TR	M..., ZGGZ80
–	–	(MP25-2, MH25-2 ⑥)	–	–
–	GZMB80-0025 ④	GZ80-1001 ③, GZM80-0025 ④, MH25-2 ⑥	TR ④	M... ③
SU4/2L, G4/2 ⑩	GZT4-0040 ⑥, GZMB4-0040 ⑨	G4 1052 ⑥ ⑦ ⑧, G4 1053 ⑩	GZT4-0035 ⑥, TR ⑨	M..., ZGGZ4 ⑥, R4P-0001, R4W-0003
–	GZT4-0040	G4 1052	GZT4-0035	M..., ZGGZ4, R4P-0001, R4W-0003
SU4L, G4 ⑩	GZT4-0040 ⑥, GZMB4-0040 ⑨	G4 1052 ⑥ ⑦ ⑧, GS4-0036 ⑥, G4 1053 ⑩	GZT4-0035 ⑥, GS4-0035 ⑧, TR ⑨	M... ⑦, ZGGZ4 ⑥, R4P-0001, R4W-0003
–	–	–	–	–
G2M ②	–	GZ2 1060 ①, G4 1050 ②	–	–
GOP8 ⑥	–	PZ11 0031 ③, (GZ 1050, GZU 1052 ④), GZP-0054 ⑤, R159 1051 ⑥	GZP-0035 ⑤	R15-M404, R15-M203, COM3 ⑤
GOP11 ⑥	–	PZ11 0031 ③, (GZ 1050, GZU 1052 ④), GZP-0054 ⑤, R159 1051 ⑥	GZP-0035 ⑤	R15-M404, R15-M203, COM3 ⑤
GOP14 ⑥	–	GZ14 0737, R15 0736 ⑥	–	–
–	–	MBA	–	–
–	–	TR4-2000	GZT4-0035, TR ⑦	ZGGZ4 ⑦

① For sockets GZ2 apply spring wire clips GZ2 1060 and spring clamps GZ2 1111 ② For sockets S2M, G2M apply spring wire clips G4 1050. For sockets G2M apply also spring clamps G2M 1020 ③ For sockets PZ8, PZ11 apply spring wire clips PZ11 0031 ④ For sockets GZ8, GZ11 apply spring wire clips GZ 1050. For sockets GZU8, GZU11 apply spring wire clips GZU 1052 ⑤ For sockets GZP8, GZP11 apply spring wire clips GZP-0054, description plates GZP-0035 and time modules COM3 ⑥ For sockets GOP8, GOP11 apply spring wire clips R159 1051 and spring clamps R15 5922. For sockets GOP14 apply spring wire clips R15 0736 and spring clamps R15 5922 ⑦ For sockets GZT4, GZM4 apply description plates GZT4-0035. For sockets GZMB4 apply description plates TR. For sockets GZMB4 not applicable interconnection strips ZGGZ4