

A Higher Level of Performance



Manual

Gladiator

Vibration Smart Switch Series

A Level Switch for Liquids and Solids



For more information, please visit >

www.hawkmeasure.com



Table of Contents

Gladiator Vibration Smart Switch Series



Contents

Overview	3	Setup Procedure	13
Principle of Operation	3	Smart Probe Functionality Layout	13
Typical Uses	3	Smart Probe Version	14
Function	3	Smart Probe Version	15
Features	3	Remote Functionality Layout	16
Primary Areas of Application	3	Remote Version	17
		Remote Amplifier	18
Typical Applications	4	Software Parameters	19
Level switch in liquid tank	4	Software Tree	19
Level switch in a plastic pellet silo	4		
High and low liquid level switch in tanks	4	Flow Chart	20
High and low level switch in hopper	4	Quickset Menu	20
Liquid Probe	5	Advanced Menu	21
Temperature Extension Option	5	Advanced Menu	22
Remote Amplifier	5	Diagnostic Displays (Remote type only)	23
Solid Probes	5		
Mounting	6	Troubleshooting	24
		Remote Version	24
Mounting Examples	7		
Mounting	7	Part Numbering	25
		Integral Probe Version	25
Wiring	8	Remote Version	26
Integral Probe Wiring	8		
Remote Probe to Amplifier Wiring	9	Specifications	27
Relay Functions	10		
Multidrop Connections	11		
Test Terminal Function Selection (SPDT Only)	12		

PROPRIETARY NOTICE

The information contained in this publication is derived in part from proprietary and patent data. This information has been prepared for the express purpose of assisting operating and maintenance personnel in the efficient use of the instrument described herein. Publication of this information does not convey any rights to use or reproduce it, or to use for any purpose other than in connection with the installation, operation and maintenance of the equipment described herein.

WARNING

This instrument contains electronic components that are susceptible to damage by static electricity. Proper handling procedures must be observed during the removal, installation, or handling of internal circuit boards or devices:

Handling Procedure:

1. Power to unit must be removed prior to commencement of any work.

2. Personnel must be grounded, via wrist strap or other safe, suitable means, before any printed circuit board or other internal devices are installed, removed or adjusted.
3. Printed circuit boards must be transported in a conductive bag or other conductive container. Boards must not be removed from protective container until the immediate time of installation. Removed boards must be placed immediately in a protective container for transport, storage, or return to factory.

Comments:

This instrument is not unique in its content of ESD (electrostatic discharge) sensitive components. Most modern electronic designs contain components that utilize metal oxide technology (NMOS, CMOS, etc.). Experience has proven that even small amounts of static electricity can damage or destroy these devices. Damaged components, even though they appear to function properly, exhibit early failure

Overview

Gladiator Vibration Smart Switch Series



The Gladiator Smart Vibration Switch is a third generation, state-of-the-art level probe, designed to operate in tough industrial environments. The forks of the vibration switch are driven to vibrate like a 'tuning fork'. When material touches the forks, their vibration is changed and output will switch in response. The output has adjustable hysteresis and delays for 'on' or 'off' switching.

A test function is available to remotely confirm the probe integrity by switching the relay contacts.

The Gladiator Smart Switch Series includes communications capability for remote adjustment, control and monitoring.

Principle of Operation

A stainless steel tuning fork is driven by piezo ceramic elements, causing it to vibrate at its resonant frequency. When the material to be detected covers the fork, vibrations are damped. The changed vibration is sensed electronically, and the processed signal is used to switch a relay for indication or control purposes.

Typical Uses

- Failsafe high-level / low-level alarm
- High-level alarm
- Low-level alarm
- Interface Detection
- Pump control.

Function

Point level switch for liquids, solids and slurries.

Primary Areas of Application

- Brewing
- Cement
- Chemical
- Dairy
- Edible oil
- Fertilizer
- Food & Beverage
- Glass
- Mining & Metals
- Oil & Gas
- Packaging
- Paint
- Paper
- Pharmaceutical
- Plastics
- Power Generation
- Refining
- Semiconductor
- Sugar
- Textile
- Water & Wastewater

Features

- Suitable for a wide range of solids and liquids
- Simple '1-minute' setup
- Heavy duty construction
- Remote sensor or Smart 'all in one' types
- Relay outputs: Smart probe (1) Remote (2)
- Remote test function
- Adjustable ON and OFF delays (0-20 sec)
- Smart communication options, GosHawk, DeviceNet, Modbus, HART, Profibus DP
- Remote GSM Connection option
- Remote amplifier to probe separation up to 500 m (1640 ft)
- Bright visual status indication on probe
- Independent housing alignment after mounting thread locked

Typical Applications


Gladiator Vibration Smart Switch Series



Level switch in liquid tank




High and low liquid level switch in tanks

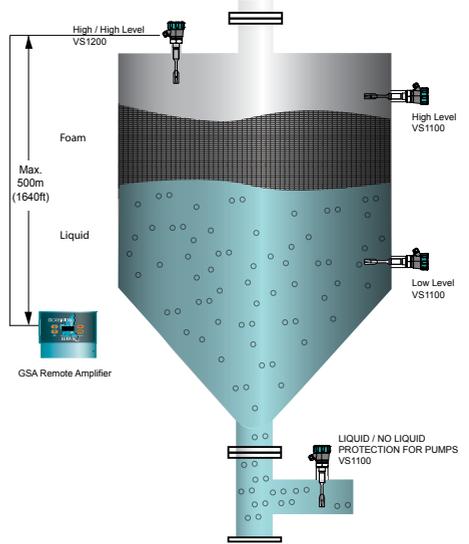

Level switch in a plastic pellet silo



High and low level switch in hopper

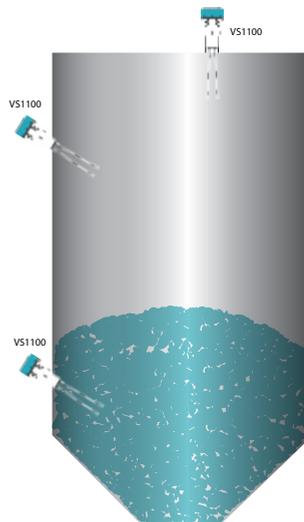


Typical Applications



Gladiator Vibration Smart Switch Series





Liquid Probe

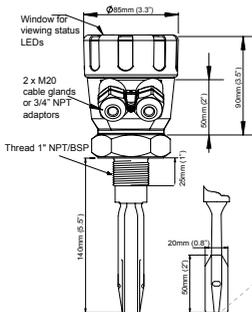

Solid Probes

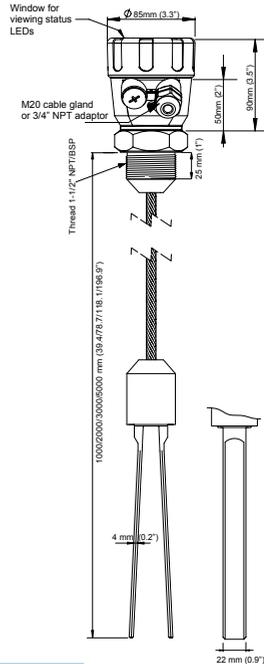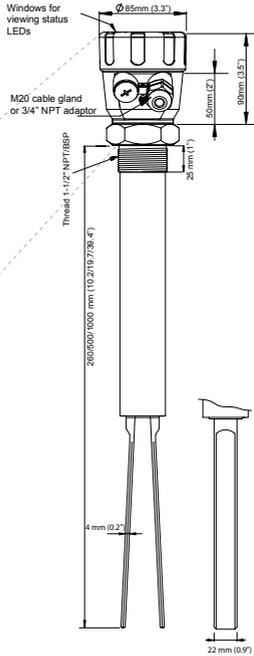





Temperature Extension Option

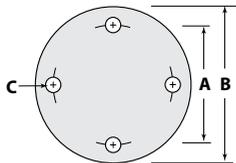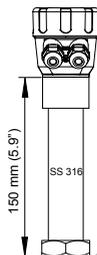

Flange Dimensions - 50mm (2")

	A		B		C	
ANSI (Class 150)	120.7	4.75"	152.4	6"	19.1	0.75"
DIN (PN40)	125	4.9"	165	6.5"	18	0.7"
JIS (10K)	120	4.7"	155	6.1"	19	0.75"

Remote Amplifier

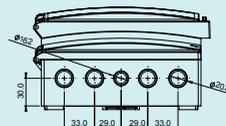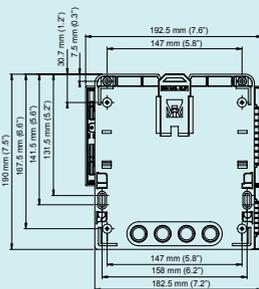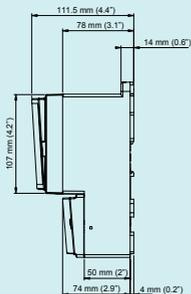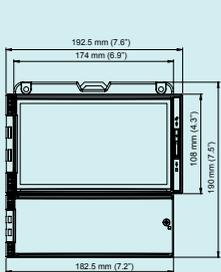

Mounting

Gladiator Vibration Smart Switch Series



Probes can be mounted from above or from the side of a vessel..

Points to consider when mounting:

A. Material infeed clearance

Install the probe away from the infeed to minimize the influence of build-up and impact forces, and to avoid false triggering from product flow.

B. Wall clearance


Install the probe far enough away from the wall to prevent the forks from coming into contact with the vessel wall. Avoid creating a confined area where material could build-up over time.

See note ②

C. Nozzle clearance

Ensure that the probe forks do not come into contact with the mounting nozzle.

Correct Mounting in a Nozzle

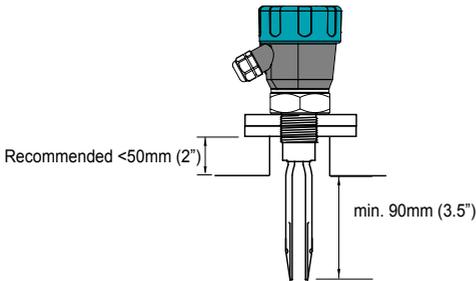

D. Top mounting

When top mounting, ensure adequate clearance is provided between forks and the wall. Avoid creating a confined area where material could build-up over time. In the case of cable probe versions, ensure enough clearance is provided between the forks and wall to allow for build-up of material occurring on the wall.

See note ②

E. Side mounting

It is highly recommended to install any side mounted probe at a downward angle of 30-45°.

Use a protection plate for side mounting where the probe may be subject to impact, strain or collapsing material.

F. Bottom mounting

Bottom mounting is not recommended. Only mount from the bottom if no build-up of material occurs. If low level mounting is required, suitable options are shown in the diagram on next page.

CORRECT MOUNTING NOTES:

(Refer to diagram on next page)

① Select correct probe for high temperature applications.

Allow adequate air flow for cooling extensions dissipate heat.

INCORRECT MOUNTING NOTES:

② Incorrect mounting because the probe is too close to the wall or roof. Material may build-up between the probe and the vessel.

③ Incorrect mounting because the probe is touching the nozzle. The probe forks must not touch the nozzle or any part of the vessel. Build-up must not bridge from the forks to the nozzle, or between the forks.

Mounting Examples

Gladiator Vibration Smart Switch Series




Mounting

Probes can be mounted from above or from the side.



Use a protection plate for side mounting where the probe may be subject to impact damage.

Install the Probe far enough away from the vessel wall to prevent the forks from coming into contact with the wall, and prevent build-up of product between the forks and the wall over time.

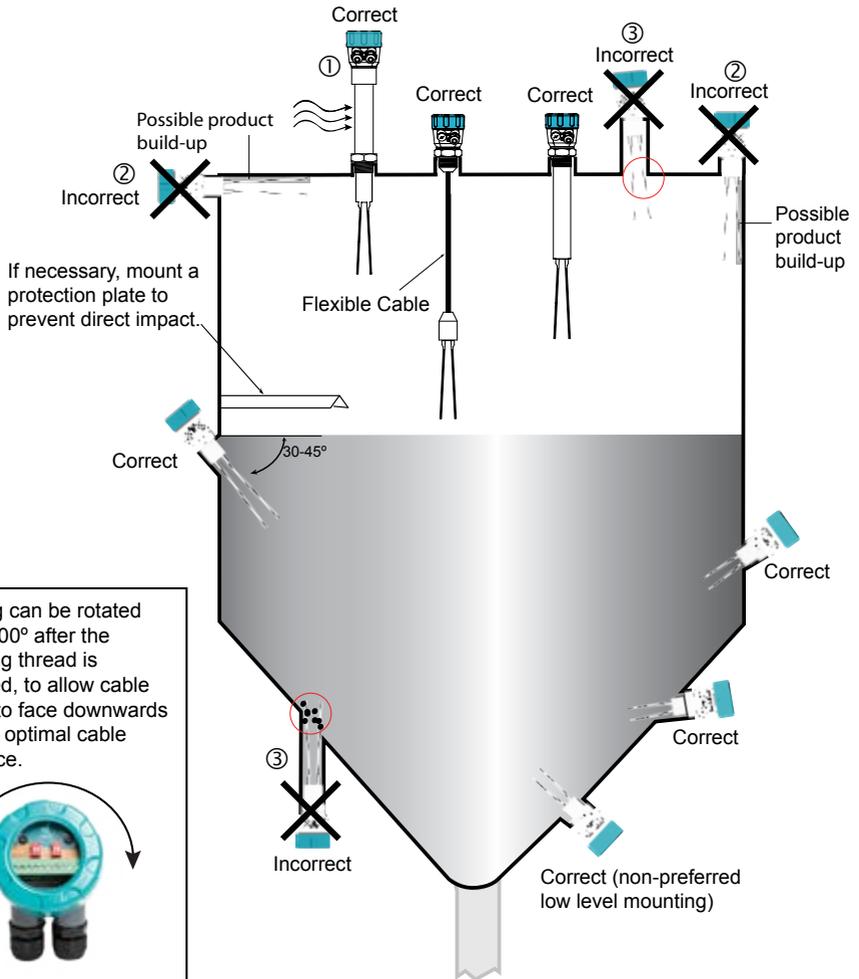



Integral Probe Wiring

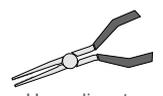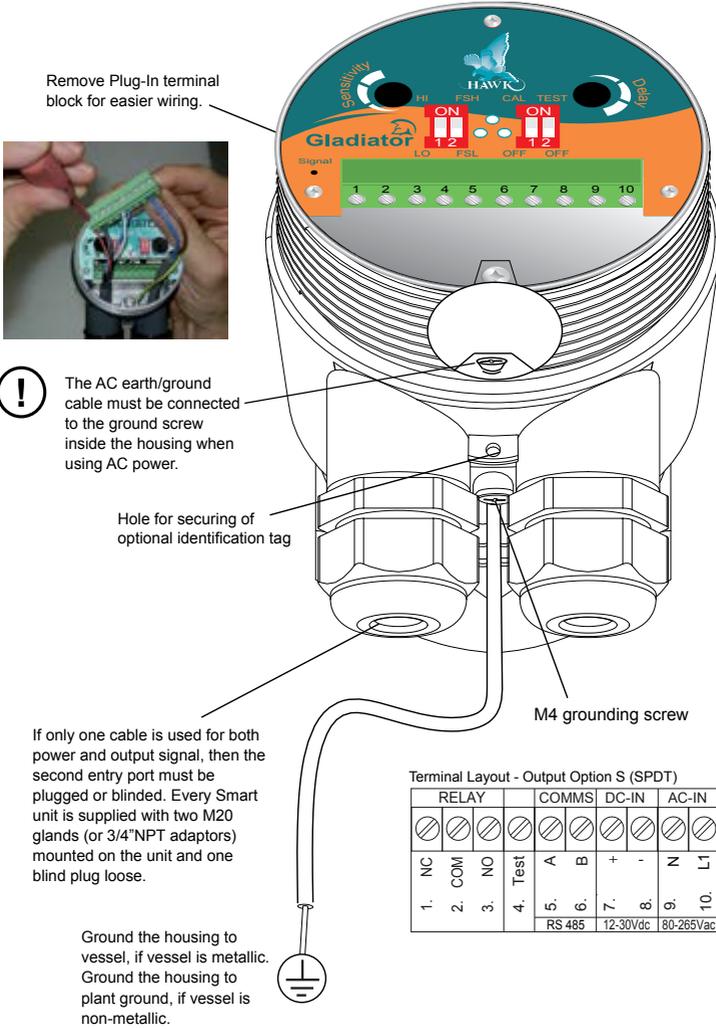

User pliers to extract terminal blocks

Terminal Layout - Output Option S (SPDT)

RELAY				COMMS		DC-IN		AC-IN	
1. NC	2. COM	3. NO	4. Test	5. A	6. B	7. +	8. -	9. N	10. L1
				RS 485		12-30Vdc		80-265Vac	



Relay Functions

Level Switch Contact Action

Relay - for Smart Probe version
(Set *Relay Action selection switch* - page 13)

Relay 1 - for Remote Version
(Set *'Relay Action'* parameter - page 20)

		Relay Action	
		FailSafe Low FSL	FailSafe High FSH (default)
State 1 RISING LEVEL (not detected)	 NC COM NO 	 NC COM NO 	
	 NC COM NO 	 NC COM NO 	
State 1 FALLING LEVEL (not detected)	 NC COM NO 	 NC COM NO 	
	POWER FAILURE NC COM NO 	 NC COM NO 	

FailSafe Switch Contact Action


Relay 2 - Remote version only.
For Smart Probes the 'Test' terminal can act as a solid state output with a similar function (see page 12).

POWER FAILURE OR INTERNAL FAILURE	 NC COM NO 	 NC COM NO
SYSTEM OPERATING NORMALLY	 NC COM NO 	 NC COM NO




Multidrop Connections


Multidrop GPRS Connection*

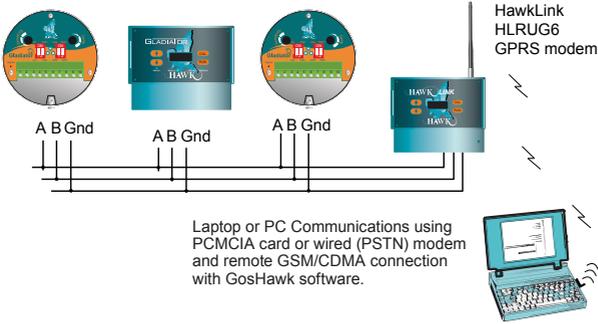

Multidrop Connection Using HawkLink USB*

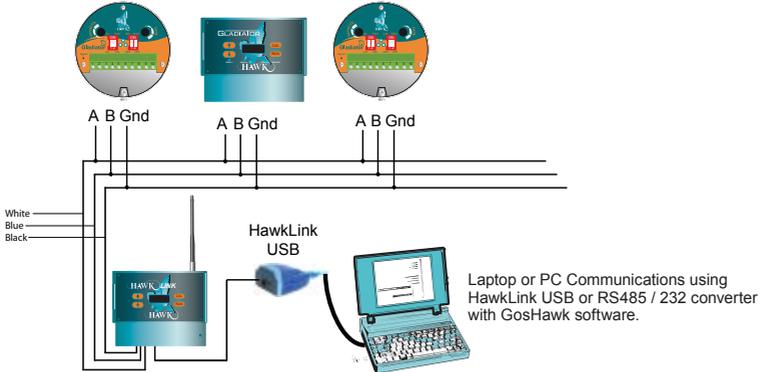

Multidrop Connection to PLC/DCS/SCADA*

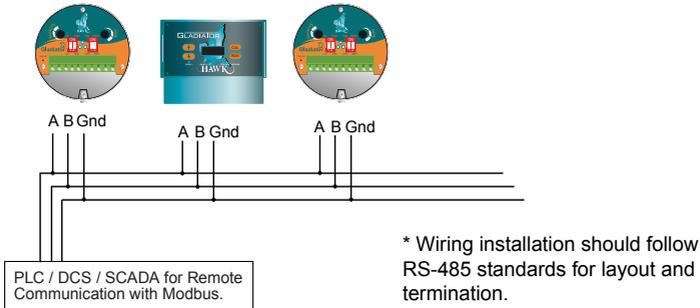




Test Terminal Function Selection (SPDT Only)


Test input mode

Test switch must be in 'TEST' (ON) position on Smart Probe - function always enabled on Remote Amplifier. Test terminal acts as an input for remote testing of the instrument's switching function. Used to check for malfunction of unit from a remote position, PLC, SCADA etc.

TEST INPUT FROM PLC/SCADA/DCS DIGITAL OUTPUT

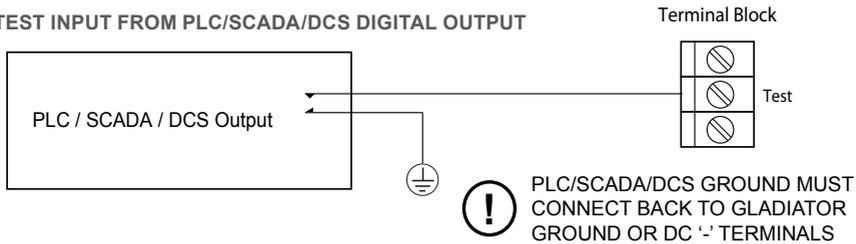


OPERATOR CONTROLLED PRESS TO TEST

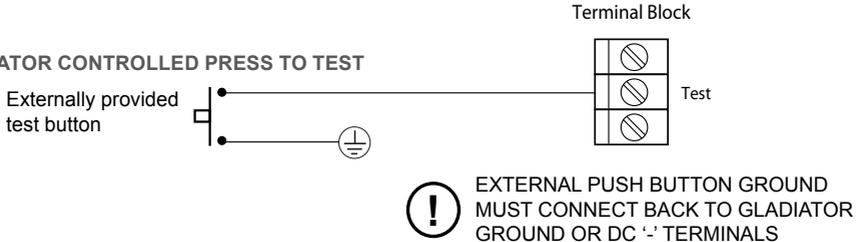


FAILSAFE OUTPUT MODE (Test switch must be in the 'OFF' position - default setting)

Test terminal will provide an output which is able to switch an external failsafe relay or PLC/SCADA/DCS input. During normal system operation this terminal will internally switch a solid state (transistor) output to ground (or DC '-'). If power fails or an internal system failure occurs, the terminal will act as an open circuit.

To switch an external relay

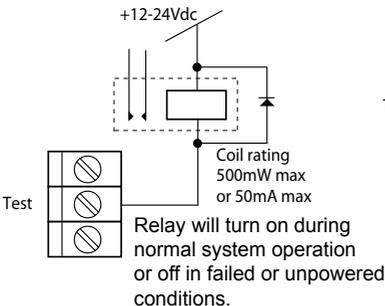


To a PLC input

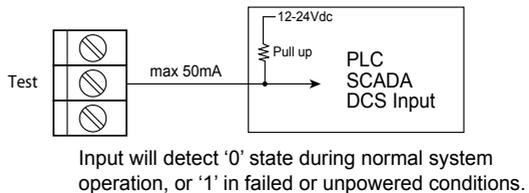



Smart Probe Functionality Layout

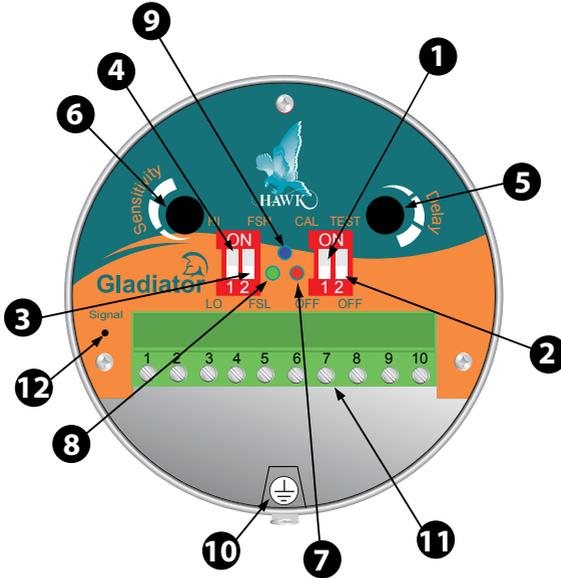

Functionality Description (bold is default)

- 1** Mounting Calibration switch CAL/**OFF**
- 2** Test input function select TEST/**OFF**
- 3** Relay action selection switch
FSH - FailSafe High
FSL - FailSafe Low
- 4** HI / LO sensitivity switch
- 5** Delay Potentiometer (0-20 sec)
(Default 0 sec. at minimum position)
- 6** Sensitivity Potentiometer
Default **50%** = **12 o'clock**
- 7** RED LED: Relay status
ON when relay coil is energised
- 8** GREEN LED: Power / Status
Blinks to indicate the functioning is correct and no media is detected.
Continuously ON when media is detected.
- 9** BLUE LED:
Blinking indicates calibration function is on.
Continuously ON indicates failed calibration.
- 10** AC Ground - must be used for AC powered installations
- 11** Removable terminal block - plug in type
- 12** Signal voltage test point
- Not used in Gladiator Admittance products



Smart Probe Version

1. Mount the unit in its actual position.

(See mounting procedure - pages 6-7)

- Make sure that external ground wire is connected between the outside ground screw on the Gladiator housing and the roof/wall/side of the silo/tank/vessel/chute. (For non metallic tanks make sure that external ground wire is connected between the same outside ground screw on the housing and the general plant ground potential).

2. Check where the actual level is relative to the probe

- Make sure that product is not touching the probe forks.

3. Turn the power on

- The green LED will either stay on for 2 seconds then begin flashing or stay on permanently to indicate operation.

4. Select the required relay contact action

- The Relay can switch 'ON' or 'OFF' as the product approaches the probe and switch 'ON' or 'OFF' in response to an instrument failure
(for details see page 13).
- Set the relay action selection switch position (FSL or FSH) depending on your requirements.

5. Cancel influence of mounting and/or build up

- Do not proceed with this step unless the product is not touching the probe forks.
- Switch the Mounting Calibration switch to 'CAL' (ON) position.
- The Blue LED will blink to indicate that mounting calibration is now in progress.
- Wait for at least 10 sec. then switch the mounting calibration switch to 'OFF' position.
- The Blue LED should turn off after a short time.
- The Blue LED will stay on if there was a calibration error.
- If this is the case, please check that the probe is not touching the product or the mounting, then try the calibration again.
- If mounting calibration was successful the blue LED should be off and the Green LED should blink every 2 sec.
- Unit is now able to cancel influence of mounting and/or build-up and probe history has been cleared.



Smart Probe Version

6. Select the sensitivity

There are two adjustments controlling the sensitivity of the switch point:

6.1. The 'HI/LO' sensitivity switch is used to set your unit depending on the specific gravity/bulk density of the product to be measured. This switch sets the range of adjustment possible with the sensitivity potentiometer.

- If the material to be detected has a low specific gravity/bulk density - set the switch to 'HI' (ON) - default.
- If material to be detected has a high specific gravity/bulk density - set switch to 'LO'
- If you are not aware of the specific gravity/bulk density of your material – set the switch to 'HI' (ON) - default.

6.2 The sensitivity potentiometer

- Set the potentiometer according to your requirements.
- A 12 o'clock setting (50%) - default, will cover the majority of instances - for the remaining instances, turning the potentiometer clockwise will increase sensitivity.
- Increasing sensitivity maybe necessary if the product is not detected when touching the probe.

7. Select the time delay

- Set the required delay using the Delay potentiometer (Default is 0.1 sec. at minimum position).
- Turn the potentiometer clockwise if any delay is required.
- Maximum rotation is $\frac{3}{4}$ of a revolution.
- Max delay is 20 sec.
- The selected delay will be used for both an ON delay and an OFF delay.*

8. Test function

(used to check for malfunction of unit from remote position, PLC, SCADA etc)

- Select the desired Test function by switching the 'Test' switch (Default = 'OFF').
- **TEST' (ON) Position:**
 - Test function is selected.
 - Test terminal (terminal number 4 of Smart probe) is used as an input to the unit.
 - The test function allows you to check the functionality of the unit.
 - Applying a ground wire to the Test terminal will change the state of the relay. It will hold this state until the ground is removed, then it will change back to the standard running mode.
 - If the unit was in a Fail mode then the relay will not change status.
- **'OFF' (Default) Position:**
 - Fail safe output function is selected.
 - Test terminal (terminal number 4 of Smart probe) will function as an open drain drive.
 - This can be used to drive a relay or an active low PLC input to detect a Fail condition.
 - In normal operation mode the Test terminal will output Zero Volts (Short to GND).
 - In Fail or unpowered mode the Test terminal will be open circuit.


**Setting of different time ranges for the delay potentiometer for ON delay and OFF delay is possible using a PC connected via GosHawk2 software. By default, both will have the same time adjustment range (20 sec max) and adjustment will result in equal ON delay and OFF delay.*

Setup Procedure


Gladiator Vibration Smart Switch Series



Remote Functionality Layout

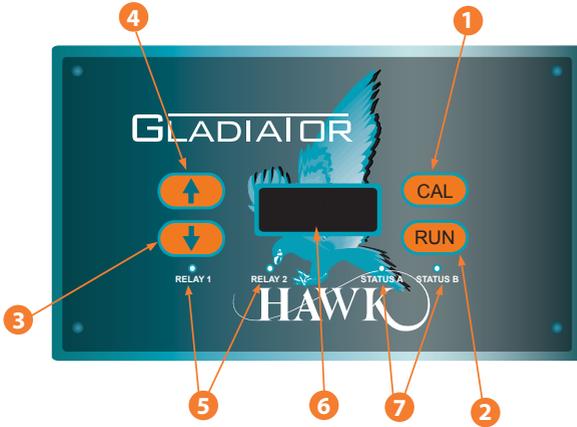


- 1 Calibrate button
- 2 Run button
- 3 Down button
- 4 Up button
- 5 Relay status LEDs 1 and 2
- 6 Display (LCD with backlight)
- 7 Status LEDs A and B
 - Status A flashes with probe to amplifier communications
 - Status B has no function in this product

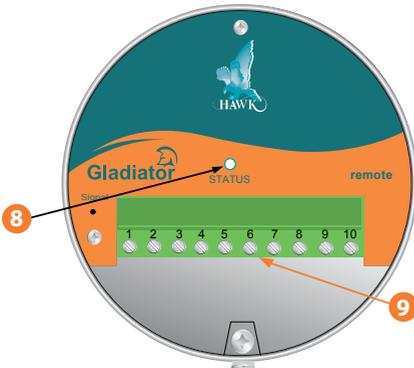


REMOVABLE REMOTE PROBE TERMINAL BLOCK

1.	2.	3.	4.	5.	6.	7.	8.	9.	10.

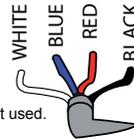

Terminals 1, 2, 3, 4, 9, 10 not used.

- 8 GREEN LED: Power / Status
 Blinks every 1/2 second to indicate that functioning is correct and no medium is detected.
 LED on continuously indicates correct functioning and media is detected.
- 9 Removable terminal block - plug in type

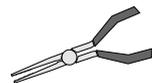

User pliers to extract terminal blocks



Remote Version

1. Mount the unit in its actual position.

(See mounting procedure - page 6-7)

- Make sure that external ground wire is connected between the outside ground screw on the Gladiator housing and the roof/wall/side of the silo/tank/ vessel/chute. (For non metallic tanks make sure that external ground wire is connected between the same outside ground screw on the housing and the general plant ground potential.)

2. Check where the actual level is relative to the probe.

- Make sure that product is not touching the probe forks

4. Simple “1-minute” Setup - Follow the flow chart

```

graph TD
    A[Sensor Value 0.0%] -- "Press [CAL]" --> B[UnLock 0]
    B -- "Press [CAL]" --> C[QuickSet]
    C -- "Press [CAL]" --> D[Cal Mounting Yes / No]
    D -- "Press [CAL] Yes" --> E[Switch Point 50%]
    E -- "Press [CAL] 50%" --> F[Delay Adjust 0.1S]
    F -- "Press [CAL] 0.1S" --> G[Relay Action FailSafe Hi]
    G -- "Press [CAL] FailSafe Hi" --> H[FailSafe Low]
    H -- "Press [CAL] FailSafe Low" --> I[FailSafe Low]
    
```

Cancel Influence of Mounting

Do not proceed with this step unless the product is not touching the probe forks. Select 'Yes' to start the mounting calibration. 'Wait' will be displayed during the calibration for up to 30 seconds. Unit is now able to cancel the influence of the mounting. The % reading has been zeroed with the existing process conditions and probe history log has been cleared.

Select the Switch point (sensitivity)

The output relay will switch at the entered % value. The default value of 75% will be suitable for detecting most media. For detection of products having low specific gravity/bulk density, select a lower % value and vice versa. A higher % value will require the product to cover more of the probe before switching will occur. When the level falls the relay will switch back at half of the entered switch point % value.

Select the Time Delay

Set the time to be used for both switch on and switch off delays.

Select the required relay action

The Relay can switch 'ON' or 'OFF' as the product approaches the probe and switch 'ON' or 'OFF' in response to an instrument failure. *For details see page 10.* Set the parameter to FailSafe Hi or FailSafe Low depending on your requirements.



Remote Amplifier

Entering Data

All software adjustments are achieved via the four PUSHBUTTONS on the front panel.



In Run Mode

(A) Press and hold - interrupts normal operations and allows access to software menu headings.

In Calibrate Mode

- (B) Steps into a menu selection to allow editing (down one level)
- (C) Saves selected value and moves onto the next menu item.




In Run Mode

(A) Scrolls up through operating diagnostics on display LCD.

In Calibrate Mode

- (B) Scrolls up through software parameters when browsing the menus.
- (C) Increases display value when editing a parameter.

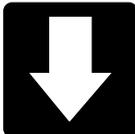

In Run Mode

(A) Scrolls down through operating diagnostics on LCD display.

In Calibrate Mode

- (B) Scrolls down through software parameters when browsing the menus.
- (C) Decreases display value when editing a parameter.



In Run Mode

(A) Hides diagnostics if they are in view and returns to the standard running display.


In Calibrate Mode

- (B) Steps out of a menu or selection (up one level). Parameter value will be stored automatically when stepping up.
- (C) Returns to running mode from the top level menu.



Software Tree


Software Version 7.14

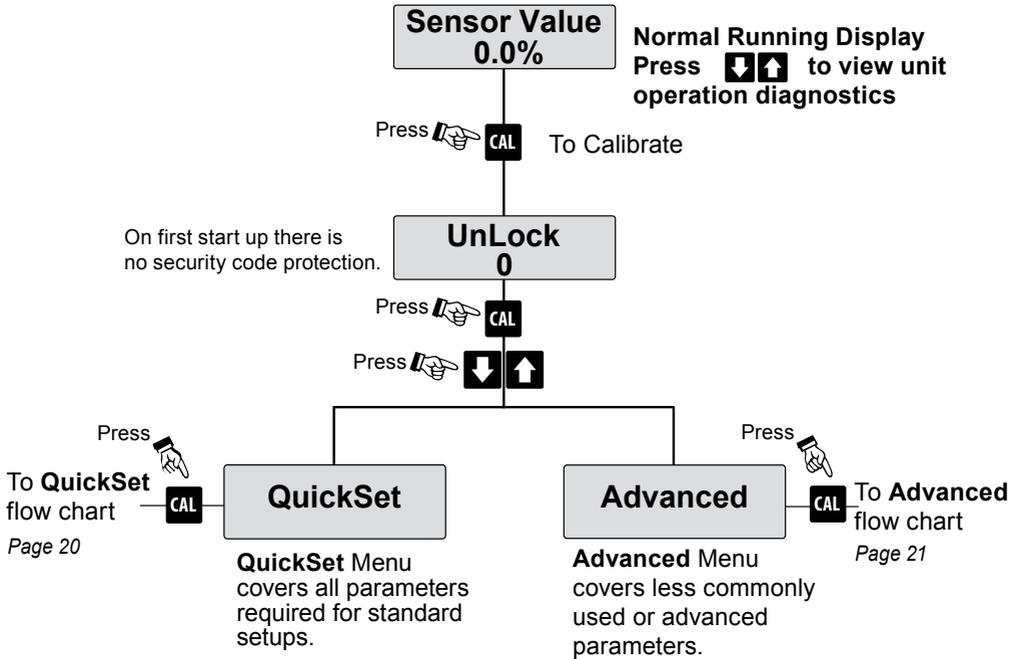

Press **[RUN]** to return to normal operation




Quickset Menu

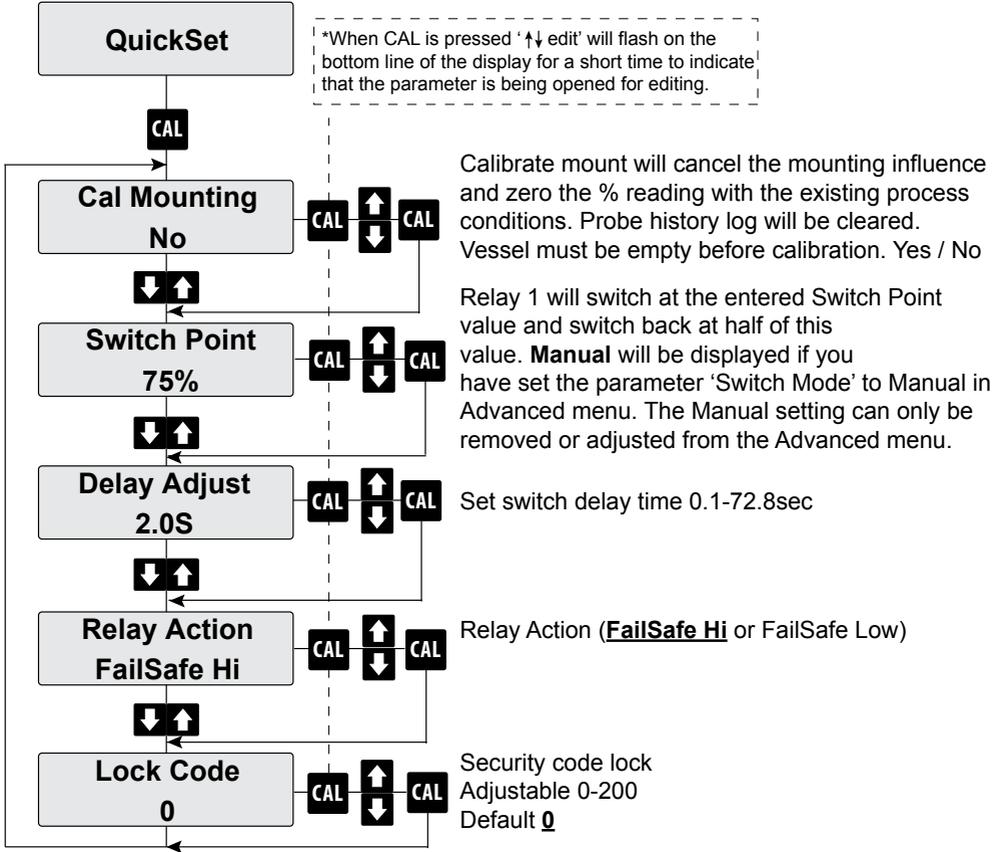

Default values/settings in bold and underlined



Advanced Menu

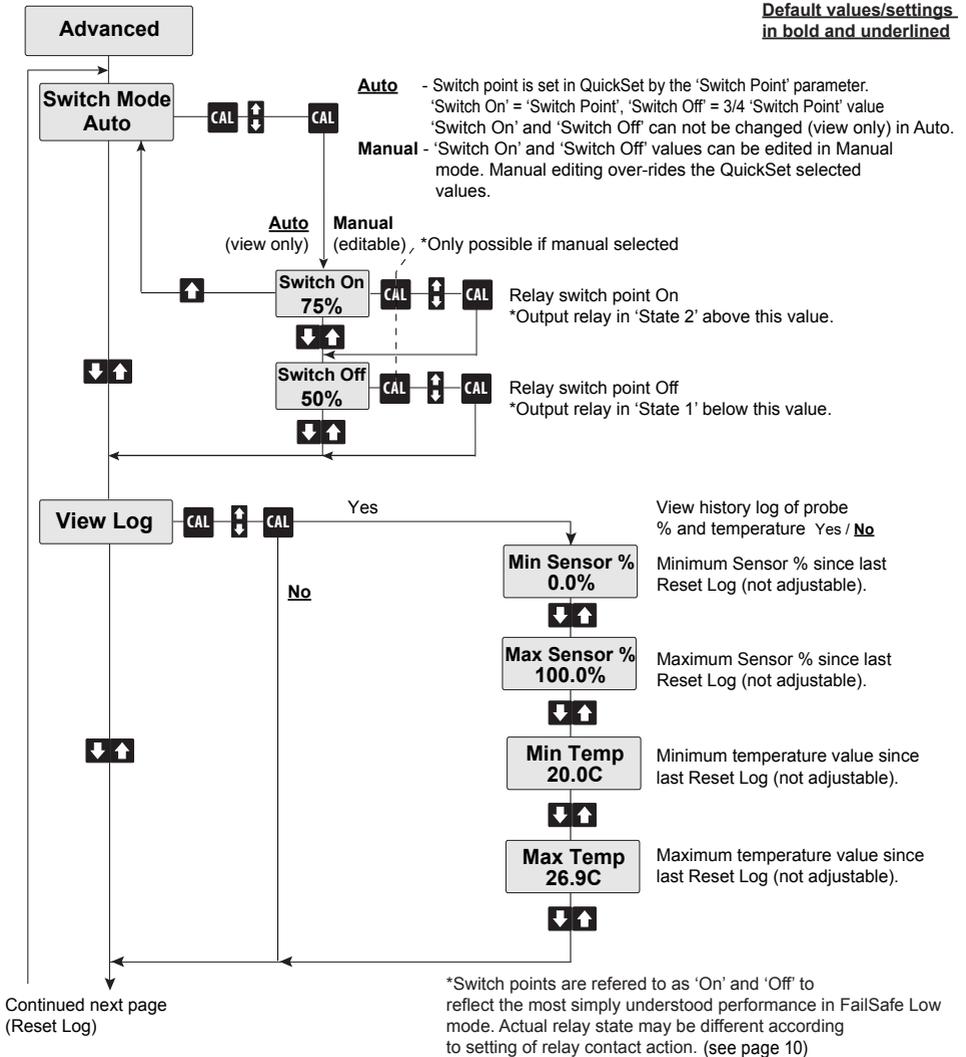



Advanced Menu


From previous page

Reset Log
No



Reset probe history log
(Yes / No)
Log will automatically reset when Cal Mounting is used in QuickSet to cancel mounting influences and re-zero the % reading.

Comms Type
Modbus

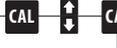

Modbus

- HART
- Profibus DP
- DeviceNet


Selection should not be changed unless required hardware is present.

Device ID
1




1-255

Baud Rate
19200

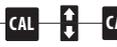

- 1200
- 4800
- 9600
- 19200**
- 38400
- 57600

Back Light
On

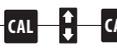

Display Backlight
On/Off

VibratePower
2



Vibration power control. Different power levels may be suitable for different products. 1min, 4 max




Diagnostic Displays (Remote type only)

The diagnostic displays appear on the top line of the LCD, after pressing the Up or Down push button when the Gladiator switch is in its normal running mode.

The diagnostics provide the user with valuable performance feedback on how the instrument is performing whilst in operation.

The measured reading Sensor Value (%) continues to be displayed on the second line of the LCD during diagnostic viewing on the top line. Output relays will continue to operate during diagnostic viewing.

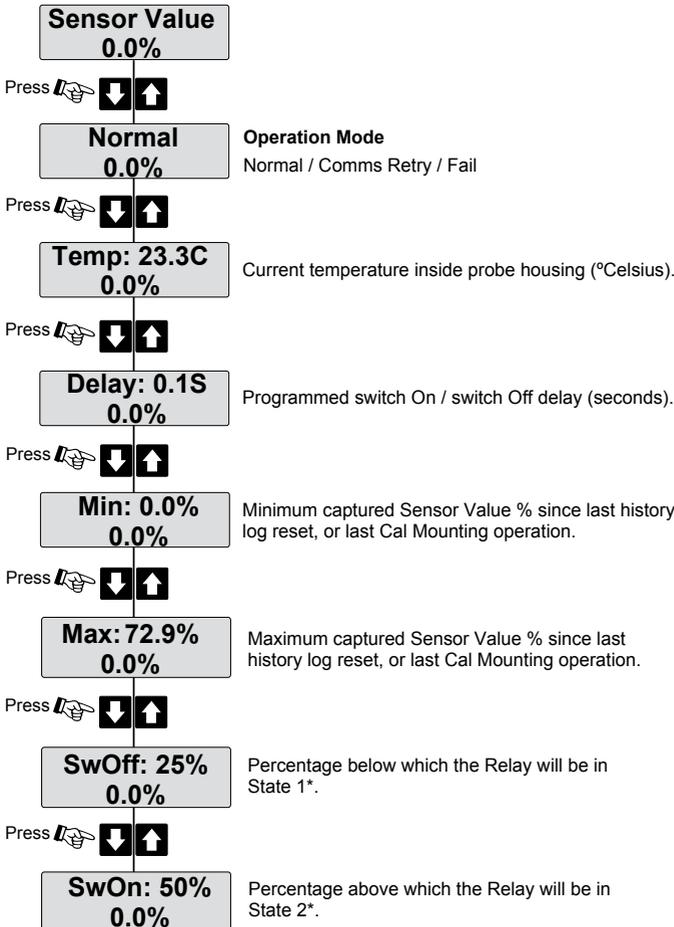



Remote Version

Operation Setup Check

After final adjustment it is advisable to check the performance of the probe relative to your entered settings.

Ensure there is no mounting influence.

- When calibrating the mounting of the unit, there should be no product touching the probe forks, and the forks should not touch the vessel wall or be bridged to the wall or to one another by build-up. After calibrating the unit the Sensor Value (%) should read approximately 0.0% with no product touching the probe.
- Allow infeed to occur and note the Sensor Value (%) change (if there is any) - as the level makes contact with the forks the Sensor Value (%) number will increase and continue to increase as the product covers more of the forks.
- The Gladiator Vibration switch is capable of switching repeatably and reliably whenever a solid or liquid product comes into contact with the probe forks. Contact is required for detection to occur.
- The Sensor Value (%) will reach its maximum after the forks are covered - but the Switch Point can be set at any value less than the maximum. It is recommended to select the set point more than 10% below the maximum value seen with material fully covering the forks.

- For instance the following readings may occur

Sensor Value (%)	
Before filling	0.0%
Material contacts forks	96.5%
Material covers forks	285.7%

A. You may choose to leave the Switch Point at the default 50%. The Gladiator will switch reliably upon contact of the material to the forks.

B. You may choose to adjust the Switch Point to 100% to switch when the product contacts the forks and covers them a little more than in A above.

- By default the Switch Off is set at 1/2 of the Switch Point. You may wish to adjust this to a higher or lower number. This is adjustable in the Advanced Menu by selecting Switch Mode - Manual. You can then manually select your Switch On and Switch Off values.
- In general, you should not choose the Max Sensor % (Max) value nor the Min Sensor % (Min) value as the Switch Point.
- If possible, always have the Switch On % at a value of at least 10% less than the Max Sensor % (Max) value and Switch Off at least 10% more than the Min Sensor % (Min).
- If the % change on the display is too small then the Display Span parameter in the Advanced menu can expand the display resolution (select a larger number - smaller raw range) and vice versa. Changing the Display Span will change Switch Point value.



Integral Probe Version

VS1100 Gladiator Vibration Switch - Integral Probe

Power Supply

- B 12-30 VDC
- U 12-30VDC and 90-260VAC

Output Options

- S Switch only, 1 level relay, Modbus

Housing

- S Powder Coated Aluminium, Glass viewing window
- C 316 Stainless Steel, Glass viewing window

Process Temperature

- 1 80°C (176 °F)
- 2 Maximum 150°C (302 °F)

Version

- 1 Rigid probe
- 2 Flexible Cable with Probe (solid/powder version only)

Application Type

- L Liquid
- S Solid/Powder - 1.5" mounting only

Mounting

- TN10 1" NPT Thread - Liquid type only
- TB10 1" BSP Thread - Liquid type only
- TN15 1.5" NPT Thread
- TB15 1.5" BSP Thread
- FA2 2" Flange ANSI (Class 150)
- FD2 2" Flange DIN 50 (PN 40)

Approval Standard

- X Not Required
- A20 ATEX Grp II Cat 1/2 D Ex tD A20 IP65 T100°C for Ta -20°C to 80°C
- i20 IECEx Zone 20 (Ex iaD A20 IP65 T100°C Ta -20°C to 80°C
- A22 ATEX Grp II Cat 3 GD T75°C IP67 Tamb -40°C to 65°C

**(P) Rigid Probe Length (C) Cable Length
(custom lengths min: P30 / C100 max P100 / C500)**

- P14 140 mm (5.5") rigid probe - 'Liquid' type only
- P26 260 mm (10.2") rigid probe
- P50 500 mm (19.7") rigid probe
- P100 1000 mm (39.4") rigid probe
- C100 1000 mm (39.4") flexible cable - 'Solid/Powder' type only
- C300 3000 mm (118.1") flexible cable - 'Solid/Powder' type only
- C500 5000 mm (196.9") flexible cable - 'Solid/Powder' type only

VS1100 B S S 1 1 S TN15 X P14



Remote Version

Remote Amplifier

GSA Remote Gladiator System Amplifier

Housing

S Standard polycarbonate electronics housing

Power Supply

B 12-30VDC

C 36-60VDC

U 12-30VDC and 90-260VAC

Output Options (inc. Modbus)

S Switch only, 1 level relay, 1 failsafe relay

Approvals

X Not Required

A22 ATEX Grp II Cat 3 GD T75°C IP67 Tamb -40°C to 65°C

GSA S U S

Remote Probe

VS1200 Remote Gladiator Vibration Probe

Housing

S Powder Coated Aluminium, Glass viewing window

C 316 Stainless Steel, Glass viewing window

Process Temperature

1 80°C (176°F)

2 150°C (302°F)

Version

1 Rigid Probe

2 Flexible Cable with Probe (solid/powder version only)

Application Type

L Liquid

S Solid/Powder - 1.5" mounting only

Mounting

TN10 1" NPT Thread - Liquid type only

TB10 1" BSP Thread - Liquid type only

TN15 1.5" NPT Thread

TB15 1.5" BSP Thread

FA2 2" Flange ANSI (Class 150)

FD2 2" Flange DIN 50 (PN 40)

Approval Standard

X Not Required

A20 ATEX Grp II Cat 1/2 D Ex iaD A20 IP65 T100°C Ta -20°C to 80°C

i20 IECEx Zone 20 (Ex iaD A20 IP65 T100°C Ta -20°C to 80°C

A22 ATEX Grp II Cat 3 GD T75°C IP67 Tamb -40°C to 65°C

(P) Rigid Probe Length (C) Cable Length

(custom lengths min: P30 / C100 max P100 / C500)

P14 140 mm (5.5") rigid probe - 'Liquid' type only

P26 260 mm (10.2") rigid probe

P50 500 mm (19.7") rigid probe

P100 1000 mm (39.4") rigid probe

C100 1000 mm (39.4") flexible cable - 'Solid/Powder' type only

C200 2000 mm (78.7") flexible cable - 'Solid/Powder' type only

C300 3000 mm (118.1") flexible cable - 'Solid/Powder' type only

C500 5000 mm (196.9") flexible cable - 'Solid/Powder' type only

VS1200 S 1 1 S TN15 X P14



Specifications

Gladiator Vibration Smart Switch Series



Operating Voltage

- 7 - 30VDC (residual ripple no greater than 100mV)
- 80 - 265VAC 50/60Hz
- 36-60VDC

Power Consumption

- <0.8W @ 24VDC
- <6W @ 48VDC
- <5VA @ 240VAC
- <3VA @ 115VAC

Communications

- GosHawk, Modbus
- Remote version also with HART, Profibus DP and DeviceNet (options)
- Multidrop mode can address 1-250 units over 4 wires

Relay Output: (1) Integral (2) Remote

- Form 'C' (SPDT) contacts, rated 5A at 240VAC resistive
- Remote failsafe test facility for one relay

Vibration Frequency

- Liquids 425Hz
- Solids 80Hz

Measurement Capability

- Liquids - All liquids and many solids
- Solids - Solids, powder and some liquids

Sensitivity

- Liquids - 50 g/l
- Solids - 5 g/l

Stability

- 0.01% of reading / °C

Operating Temperature

- Remote electronics -40°C (-40°F) to 80°C (176°F)
- Integral Probe -40°C (-40°F) to 150°C (302°F)*
- Remote Probe -40°C (-40°F) to 150°C (302°F)*

Probe/Amplifier Separation

- Up to 500m (1640ft) using specified extension cable

Cable type between Amplifier and Probe

- 4 conductor shielded twisted pair instrument cable
- Conductor size dependent on cable length
- BELDEN 3084A, DEKORON or equivalent
- Max: BELDEN 3084A = 500m (1640ft)
- Max: DEKORON IED183AA002 = 350m (1150ft)

Maximum Operating Pressure

- 2 BAR

Display (Remote version only)

- 2 line x 12 character alphanumeric LCD
- Backlight standard

Memory - Remote

- Non-Volatile (No backup battery required)
- >10 years data retention

Enclosure Sealing

- Integral Probe IP67
- Remote Electronics IP65 (NEMA 4x)
- Remote Probe IP67

Cable Entries

- BSP process mounting: 2 x M20 Glands
- NPT process mounting: 2 x 3/4" NPT threaded adaptors
- Remote: 3 x 20mm (0.8"), 1 x 16mm (0.6") knock outs

Mounting

- 1" NPT or BSP Thread - Liquid type only
- 1.5" NPT or BSP Thread - Solid/Powder type only
- 50mm (2") Flange (ANSI, DIN or JIS patterns available)

Remote Test Input

- Press to test
(used to check for malfunction of unit from remote position, PLC, SCADA etc)

*Model dependent

Contact

Gladiator Vibration Smart Switch Series



HAWK, Since 1988

Hawk Measurement Systems Pty Ltd (HAWK) was established in 1988. It's founding members saw the universal requirement of various industries requiring improved process control and efficiency in their operations.

We Can Help

HAWK understands the difficulties customers face when seeking accurate level measurement. Every application is different, involving a multitude of environmental factors. This is where HAWK excels. Our aim is to ensure that customers feel comfortable with our technology, and are provided with long term and reliable solutions. We believe that a combination of application and product expertise, as well as forward thinking and proactive support policies are the foundation of successful customer-supplier relationships.

Progressive Technical Support

HAWK believes that the future of the Level Measurement Industry revolves around the quality of pre and post sales - support. Our aim is for all sales & support staff to be product experts, and more importantly application experts making our customers applications as efficient and consistent as possible.

Hawk Measurement Systems (Head Office)

15 - 17 Maurice Court
Nunawading VIC 3131, AUSTRALIA
Phone: +61 3 9873 4750
Fax: +61 3 9873 4538
info@hawk.com.au

For more information and global representatives: www.hawkmeasure.com

Remote Innovation

HAWK understands the need for immediate technical assistance.

The HawkLink 3G communication device allows any computer with internet access and our free GosHawk diagnostic & calibration software; to dial in, calibrate, test, and check the performance of HAWK products. This innovative system allows our Global Support Team to assist with commissioning and after sales service of HAWK equipment worldwide. Measurement problems are addressed as they happen; not days or weeks later.

Knowledge Sharing

HAWK believes that knowledge sharing is key to creating long term relationships. Empowering our customers and our worldwide distribution network, whilst being available at all times to lend a helping hand, is the perfect recipe for long-term solutions and relationships. HAWK openly extends an invitation to share our 25 years of level measurement experience, and ensure that your day-to-day processes are efficient, understood, and always working.

All company or product names are registered trademarks or trademarks of their respective owners.

Hawk Measurement

96 Glenn Street
Lawrence, MA 01843, USA
Phone: +1 888 HAWKLEVEL (1-888-429-5538)
Phone: +1 978 304 3000
Fax: +1 978 304 1462
info@hawkmeasure.com

